



Cowboy's **Wild GAME WASHER**

FLOATS AND FLUSHES MUD, BLOOD, FEATHERS, SCALES AND OTHER DEBRIS!

- Place Game Washer in a well-drained area
- Remove the seat and connect to a standard water hose
- Place breasted birds, fish fillets, or other game in the Game Washer
- Turn on the water
- As the bucket fills, game is pressure washed clean of feathers, scales, blood and other unwanted debris
- Debris will float over the top and out of the Game Washer within minutes
- Rapidly cools meat to water temperature
- Game is clean and ready for the freezer in 3-4 minutes, no additional washing needed



VISIT GAMEWASHER.COM FOR PRODUCT VIDEOS AND MORE

WARRANTY: *If you have a problem or issue with this product, email info@gamewasher.com and we will resolve or replace. Incidental leaks are designed and expected.*